Classic LED display universal multifunctional temperature controller/regulator AiFUZZY-815/875



Thank you very much for choosing TMCON products, In order to better use this product, please read the following before using.

About us

Guangzhou Tmcon Electronic Technology Co, Ltd. Address: No.1, Xinhe Road West Street, Xier Village, Luopu Street, Panyu District, Guangzhou Email: chinatmcon@163.com WeChat : +86 13662353011 TEL:+86 13533063770 WhatsApp: +86 13533063770 Alternatively, click on the instant messaging tool on the www.china-tmcon.com website to answer your questions online

TMCON

Technical Manual Version number: 919-V9-01

Table of contents

1-2
3
4
5-6
7-8
9-10
11
12
.13-14
13
14
14
15-16
15
15
15
15
15
15
16
ow16
16
17-28
17-18
18-24
24-28
.29-35

Page

Table of contents

10.1 Position proportional output	29
10.2 Manual auto-tuning	29
10.3 Single-phase phase-shift trigger output	
10.4 Dead zone	30
10.5 Temperature re-transmitter / Program generator / Manual current output	
10.6 External signal remote control SV set value	30
10.7 Alarm delay diagram	31
10.8 Alarm self - locking	31
10.9 First alarm exemptions	31
10.10 LBA Control loop break off / shorted Alarm	31
10.11 Fine Control	32
10.12 Communication function	32
10.13 Partial application wiring method	32-35
10.13.1 The wiring method of the input signal	32-33
10.13.2 Main control output wiring method	33-35
Chapter 11 Input fault indication	
Chapter 12 Further explanation of AiFUZZY-875 program control	37-40
12.1 Function and Concept	37-38
12.2 Programming and operation (For AiFUZZY-875 only)	38-40
12.2.1 Ramp mode	
12.2.2 Platform Mode	39
12.2.3 Set the given value and time of the program	39
12.2.4 Multi-group PID application case	40
12.2.5 Auto-tuning program setting method	40
Chapter 13 Dimensions (in mm) and installation instructions	41-42

Page

Safety precautions

Attention

Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied.

Electric shock, fire, or malfunction may occasionally occur. Do not allow metal objects, conductors, debris (such as cuttings) from installation work, moisture, or other foreign matter to enter the Digital Controller, the Setup Tool ports, or between the pins on the connectors on the Setup Tool cable. Attach the cover to the front-panel Setup Tool port whenever you are not using it to preventforeign objects from entering the port.

Minor injury from explosion may occasionally occur. Do not use the product where subject to flammable or explosive gas.

Minor electric shock or fire may occasionally occur. Do not use a Digital Controller or any cables that are damaged.

Minor electric shock, fire, or malfunction may occasionally occur. Never disassemble, modify, or repair the product or touch any of the internal parts.

CAUTION - Risk of Fire and Electric Shock (a) This product is UL listed as Open Type Process Control Equipment. It must be mounted in an enclosure that does not allow fire to escape externally. (b) More than one disconnect switch may be required to de-energize the equipment before servicing. (c) Signal inputs are SELV, limited energy.*1

(d) Caution: To reduce the risk of fire or electric shock, do not interconnect the outputs of different Class 2 circuits.*2

If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.



*2 Class2 power supply refers to a power supply where the current and voltage are respectively limited to a certain level for testing in the secondary output of the product.









Main features

• Adopting SMD LED light is combined into Nixie tube, and the LED light is directly SMT welded to the controller PCB motherboard (old controller purchase Plug-in Nixie tube from LED Nixie tube manufacturer), which not only reduces the cost, but also autonomous controlling the quality of LED.

• Universal input, through the parameter setting can be freely to select thermocouple, thermal resistance, analog linear voltage and current input signals.

• There are many output module specifications to choose from: relay contact switch output module, SSR drive voltage output module, SCR non-contact switch output module, One-way/ three-way SCR zero-crossing trigger output module, one-way SCR phase-shift trigger output module , analog linear voltage and current output module.

• The measurement accuracy is 0.25, and the resolution is further upgraded, and the measurement is more accurate and stable.

• AiFUZZY artificial intelligence adjustment algorithm perfectly combines fuzzy control and adaptive PID control, with AT self -setting and AT self -learning functions, It can automatically learn and remember some features of the controlled object during adjustment to optimize the effect. It has the control characteristics without overshoot and undershoot adjustment, and can also obtain excellent control effects on complex and difficult control objects.

• Free definition of designated alarm ports and alarm methods, and up to 4 alarm outputs can be formed.

• MIO auxiliary input can be optionally equipped with external switch signal input, which can achieve dual temperature set value switching or RUN/STOP switching.

• In addition to the standard one-way heating PID control or one-way cooling PID control, it can also achieve dual PID dual control outputs for heating/cooling. The heating PID and cooling PID automatically switch based on the set value.

• It has the function of freely defining Rate limiting of temperature rise and drop.

• The measured value (PV) or given value (SV) can be converted into an analog linear current signal output.

• When the instrument has multiple sets of input and output, it can provide a comprehensive power supply and optoelectronic isolation solution.

• RS485 communication interface or RS232 communication interface is optional, support MODBUS-RTU communication protocol, 10mS fast communication response, unlimited write times, do not need to worry about communication write life, and can cooperate with our wireless communication module to achieve a variety of wireless transparent transmission network connection mode such as TCP.

• The power supply adopts a self-healing circuit design, which can automatically cut off power to protect the instrument in case of overvoltage or undervoltage. When the voltage is normal, it can automatically restore normal power supply.

•AiFUZZY-875 adds an 80 segment program control function on top of the high-performance AiFUZZY-815 temperature controller. AiFUZZY-875 program type instrument is used in situations where it is necessary to automatically change the set value for control according to a certain time rule. It not only has the function of 80 segments programming, which can set the rise and fall slope of any given value, but also has programmable/operable commands such as jump, run, pause and stop, which can modify the program during program control operation; in addition, it has power failure processing mode, measured value startup function and preparation function as well, which makes program execution more efficient and perfect.

Technical Parameter

type	G - type panel	D - type panel	A - type panel	E - type panel	F - type panel
Panel size (wide × high)	48×48mm	72×72mm	96×96mm	48×96mm (Vice)	96×48mm (Horizontal)
Open -hole size (wide × high)	45×45mm	68×68mm	92×92mm	45×92mm	92×45mm
Installation method	Embedded pane	linstallation			
Power supply	AC100~240V 50)/60Hz; or DC12~	24V		
Allow the range of voltage changes	85%~ 110%of the	e rated power volt	age		
Power consumption	About 5VA when	AC100 ~ 240V, ar	nd about 3.5VA at	DC24V	
Display method	7 -segment LED	digital display an	d separate indicat	ors	
Input specification	Thermocouple ir Thermal resistar Linear current in Linear voltage ir 0-100mV, 0-500	Thermocouple input: K, S, R, E, J, T, B, N, WRe3-WRe25, WRe5-WRe26, etc Thermal resistance input: Cu50, Pt100 Linear current input: 0-20mA, 4-20mA Linear voltage input: 0-5V, 1-5V, 0-10V, 2-10V, 0-20V, 0-20mV, 0-60mV, 0-75mV, 0-100mV, 0-500mV, 100-500mV, etc			
Measuring range	K (-50 ~+1300 ° C), S (-50 ~+1700 ° C), R (-50 ~+1700 ° C), T (-200 ~+350 ° C) E (0 ~ 800 ° C), J (0 ~ 1000 ° C), B (200 ~ 1800 ° C), N (0 ~ 1300° C), Cu50 (-50 ~+150 ° C), Pt100 (-200 ~+600 ° C) Linear input: -9990 ~+32000 defined by users				
Decimal point	0000, 000.0, 00.00, 0.000 (set by DP parameters)				
measurement accuracy	Level 0.25				
The sampling period	Sample 10 times per second; set the digital filter parameter INF = 0, the response time ≤ 0.5 seconds				
control method	1.ON/OFF Position adjustment method (adjustable hysteresis) 2.AiFUZZY artificial intelligence adjustment, advanced control algorithm including fuzzy logic PID adjustment and parameter self-tuning function, 3.PV value transmit 4.SV value transmit				
Control cycle	0.1 ~ 300.0 seconds adjustable				
Relay contact switch output	Module capacity: 250VAC/3A or 30VDC/3A				
SSR voltage output	12VDC 50mA or 9VDC 50mA (for driving SSR solid -state relay)				
SCR non-contact output module	100~240VAC/0.2A (continuous); 2A (20mS momentary, 5S repetition period)				
SCR trigger output	Can trigger 5~500A bidirectional SCR, 2 unidirectional SCR anti-parallel connection or SCR power module				
Linear current output	0-20mA or 4-20mA can be freely defined (output voltage \geq 10.5V)				

Electromagnetic Compatibility	IEC61000-4-4 (electrical fast transient burst) ±6KV/5KHz, IEC61000-4-5 (surge) 6KV, and under the interference of 10V/m high-frequency electromagnetic field, the instrument does not crash, the 1/0 malfunctions will not emerge either, and the fluctuation of the measured value does not exceed ±5% of the range
Isolation withstand voltage	The power supply side, the relay contact and the signal side are ≥ 2300 VDC; the interdependent weak electricity signal end ≥ 600 VDC
Use environment	Temperature -10 ~+60°C (not freezing or exposed), humidity 25-85%RH
Storage environment	Temperature -25 ~+70°C (not freezing or exposed), humidity 25-85%RH

Model definition



1	2	3	(4)	5	6	7	8
Model	Panel size	MIO Auxiliary input port	OUTP Control output	ALM Alarm output	AUX Control output	COMM Communication Interface	Meter power supply
AiFUZZY815	G	N	N	Ν	Ν	N	N or not write
AiFUZZY875	D	12	R1	R1	R1	S	D
	E	13	Q1	R2	R2	S2	
	F	14	W1	R3	R3	S4	
	А	V5	W2	Q1	Q1	V5	
		V12	X2	Q2	Q2	V12	
		V24	X5		W1	V24	
			X8		W2		
			K1		X2		
			К3		X5		
			K5		X8]	
			K6	•	K1		
			Q7		V5]	
				•	V12		
					V24]	

1 Model

Code	illustrate
AiFUZZY815	Classic LED display universal multi-function temperature controller/regulator
AIFUZZY875	Classic LED display universal programmable temperature controller/regulator (AiFUZZY815 adds an 80 segment program control function on top of the AiFUZZY-875)

2 Indicates the size of the meter

Code	illustrate
G	Panel size 48 × 48mm (wide × high), open hole size 45 × 45mm
D	Panel size 72 × 72mm (wide × high), open hole size 68 × 68mm
E	Panel size 48 × 96mm (wide × high) (vertical), open hole size 45 × 92mm
F	Panel size 96 × 48mm (wide × high) (horizontal), open hole size 92 × 45mm
А	Panel size 96 × 96mm (wide × high), opening size 92 × 92mm

$(3) \sim 7$ Module code control table

Code	illustrate
N	No install touch block
12	Switch / frequency signal input interface can be used for external switching or frequency signal input
13	Analog 4-20mA/0-20mA input module

14	Analog 4-20mA/0-20mA input interface module with 24V feed (24VDC/30mA internal series power supply for two-wire transmitter)
R1	Single circuit relay normally open contact switch output module, module capacity: 250VAC/3A,30VDC/3A
R2	Double -road relay often turn on contact switch output module, module capacity: 250VAC/3A,30VDC/3A
R3	Single relay frequently open+normal closed contact switch output module, module capacity: 250VAC/3A, 30VDC/3A
Q1	SSR Solid-state relay drive voltage output module, 12VDC/50mA
Q2	Double -road SSR solid -state relay drive voltage output module, dual -road 12VDC/50mA
W1	Normally open thyristor contactless output module, capacity: 100-240VAC/0.2A, with the characteristic of "not burnt out"
W2	Normally closed thyristor contactless output module, capacity: 100-240VAC/0.2A, with the characteristic of "not burnt out"
X2	0-20mA/4-20mA photoelectric isolation programmable linear current output module
X5	Programmable linear voltage output module with 0-5V/1-5V photoelectric isolation
X8	Programmable linear voltage output module with 0-10V/2-10V photoelectric isolation
K1	One-way"not-burn-out" SCR zero-crossing trigger output module, each can trigger 5~500A bidirectional or two anti-parallel one-way SCR.
К3	Three-way"not-burn-out" SCR zero-crossing trigger output module, each can trigger 5~500A bidirectional or two anti-parallel one-way SCR.
K5	One-way 220VAC "not-burn-out" one-way SCR phase-shift trigger output module.
K6	One-way 380VAC "not-burn-out" one-way SCR phase-shift trigger output module.
Q7	Built -in SSR solid -state relay, and interconnect in the instrument and the power supply of the instrument, directly output the power supply voltage module (for example, the power supply is connected to 220V, the output 220V voltage, the power supply is 110V, the output 110V voltage), suitable for 1.5A/220V small small small small Power load (customized)
S	RS485 Optical isolation communication interface module
S2	Optical isolation RS232 communication interface module
S4	Optical isolation RS485 communication interface module with its own isolation power supply
V5	The non -isolated 5V DC voltage output module can be used for external transmitters or other circuits, with a maximum current of 50mA
V12	The isolation 12V DC voltage output module is available for external transmitters or other circuits, with a maximum current of 50mA
V24	The isolation 24V DC voltage output module is available for external transmitters or other circuits, with a maximum current of 50mA

(8) Indicates the power supply power supply

Code	illustrate
N or not write	100~240VAC power supply
D	12-24VDC power supply

Wiring diagram





Panel description



- (1) First display window(upper display window) displays the measured value PV, parameter name, etc.
- ② Second display window(The lower display window) displays the given value SV, alarm code, parameter value, etc.
- ③ Set key, used to enter parameter setting status, confirm parameter modification, etc.
- ④ Data shift key (Also as manual/automatic switching and program setup key).
- (5) Data decrease key(Also as run key).
- (6) Data increase key (Also as stop key).
- ⑦ Output indicator lights, corresponding to module output action indicators.

Installation module instructions

AiFUZZY-815/AiFUZZY-875 instrument can have up to five optional function module ports, through the installation of different modules, can achieve different types of output specifications and functional requirements.

Auxiliary Input (MIO): As an extension input or event input or feed output or extension output function, it can be installed with I4 module (internally connected with a 24V power supply, specifically for 4-20mA two wire transmitter input), I3 module (conventional 4-20mA input, internally not connected with a 24V power supply), I2 module (switch signal event input, allowing the instrument to use external switches to achieve dual set value SP1/SP2 switching, or to achieve RUN/STOP switching function, etc.), V module (DC voltage output, available for external transmitters or other circuits).

Main output (OUT): As an ON-OFF control output, FPID (PID+FUZZY) artificial intelligence adjustment output; It can also serve as a measurement value or a given value transmission output function. R module (relay contact output), Q module (SSR drive voltage output), W module (thyristor contactless output), X module (linear current and voltage output), K module (SCR zero crossing trigger, SCR phase shift trigger output) can be installed.

Alarm Output (ALM): As an alarm output function, an R module can be installed (installing R1 can achieve AL1 alarm relay output, and installing R2 can achieve AL1+AL2 alarm relay output).

Auxiliary output (AUX): As the second output (refrigeration PID control output) of the heating and cooling bidirectional dual PID control or as an alarm output, it can be installed with R module, Q module, X module, K (only K1 can be selected) module, and V module.

Communication Interface (COMM): As an RS485 or RS232 communication or PV value transmission output function, it can be installed with S module (communication module), X (linear current and linear voltage as transmission output), and V module (DC voltage output, which can be used for external transmitters or other circuits).

Note: The module is fixed to the PCB by soldering before leaving the factory according to the user's requirements when ordering, and the corresponding parameters are correctly set.

Operation Flow Chart

7.1 display status and basic operation flow chart



7.2 Program Settings flow chart (AiFUZZY-875 only)



Instruction of instrument operation method

8.1 Parameter Setting

In the basic display state, press the F key and hold for about 2 seconds to enter the field parameter setting state. If you set LOC=800 and press the F key, you can enter the function parameter settings. If you set LOC=801 and press the F key, you can enter the control parameter settings. press the (), (), (), etc. keys to directly modify the parameter values. press () to decrease the data, press () to increase the data, The value waiting to be modified will flash, press and hold, you can quickly increase/decrease the value. You can also press () key to move directly to the value bit you want to modify, and the operation is faster. press the F key and hold it for more than 2 seconds to return to the previous parameter. press the () + F key to return to the basic display state.

8.2 Set Value Setting

AiFUZZY-815 or 875 use fixed-point control mode (when parameter PrSn=0), when the Second display window the basic display state of the given value status(if the second display window displays the output value, press r = to switch to the given value display), Press r = to to enter the current setpoint status, and then press r = to, r = to directly modify the setpoint.

8.3 Setting up the program

The controller uses the program control mode (when the $PrSn \ge 1$), in the state that the second display window displays the given value, press the \checkmark key to enter the program setting state, first display the current running segment program set value, press re Key to display next data, each program is arranged in the order of "program set value - time - program set value".

8.4 Run / Hold (only for AiFUZZY-875)

In basic display status, if the program is in stop status ("StoP" is alternately dCisplayed on the second display window), press and hold the () key for about 2 sec until the second display window displays the "Run" symbol, the instrument then will start the program.

If parameter "PSyS" set F=1, user can hold the key for about 2 sec, instrument will changes to hold status and lower display window displays the "HoLd" symbol. If parameter "PSyS" set F=0, "Hold" status only can activate by parameter setting (Srun).

At Hold status, the program is still executing, and the process value is controlled same as set, but the timer stop working, and the running time and setpoint remains. At Hold status, press and hold the running time second display window displays the "Run" symbol, the instrument will back to run program.

8.5 Stop

Press and hold the () key for about 2 seconds in the basic display status, until the second display window displays the "stoP" symbol, means the stoP operation is executed now, when program stopped, timer will be reset and stop. This operation forces the instrument to stop running, meanwhile, the StEP number will reset to 1, and control output is also stopped.

8.9 Auto Tuning

When FUZZY+PID control method is chosen (CntL=FPId), the optimal PID parameters can be obtained by running auto-tuning,So as to achieve precise control without overshoot.

In basal display status, press (for 2 seconds, the "At" parameter will appear. Press (to change the value of "At" from "oFF" to "on", then press red to active the auto-tuning process. During auto tuning, the instrument executes on-off control. After 2-3 times of on-off action, the instrument will obtain the optimal control parameter value.

If you want to escape from auto tuning status, press and hold the key for about 2 sec until the "At" parameter appear again. Change "At" from "on" to "oFF", press to confirm, then the auto tuning process will be cancelled. (P.S. If parameter "rAte" activate and the heating was running, then will stop the "At" until completed the heat up process.) If the controller was applied on heat/cooling duel output system, PID parameter need separate two group to process auto tuning. When the controller was cooling control from AUX, this time can enable auto tuning to obtain P2, I2, d2.

Note 1: If the setpoint is different, the parameters obtained from auto-tuning are possible different. So you'd better set setpoint to an often-used value or middle value first, and then start auto-tuning. For the ovens with good heat preservation, the setpoint can be set at the highest applicable temperature. Depending on the system, the auto-tuning time can be from several seconds to several hours.

Note 2: Parameter HYS (on-off differential, control hysteresis) has influence on the accuracy of auto-tuning. Generally, smaller value of HYS, will get higher precision of auto tuning result. Too large value of HYS, will made the controller out of control, so, HYS is recommended to be 2.0.

Note 3: AiFUZZY-900 series instrument has the function of self-adaptation. It is able to learn the process while working. he control effect at the first run after auto tuning is probably not perfect, but excellent control result will be obtained after a period of time because of self-adaptation.

Parameter table and functions

9.1 Field parameter

In the basic display state, press and hold \mathbb{F}/\mathbb{C} key 2 sec, Enter the field parameters.

Code	Name	Description	Range
5EEP (StEP)	Current execution Program segment (applicable only to 875)	Indicating the currently executing program segment number. Modify this parameter, the program will immediately jump, for example: the current StEP=3, represent the program The runs to the third segment. If you set StEP=8, the program immediately jumps to the eighth segment execution. The settings range for StEP is limited by PrGd and PrG, example:PrGd=8, PrG=2, and so on The program is divided into 8 curves. Now the program performs second curves,Now the program executes the 2 curve, executed by the 11-20 segment program, and the StEP set range is limited to 11-20, and After the instrument is stopped running (StoP), the StEP is automatically set to initial segment 11. Another example: PrGd=0, PrG=0, PrSn=80, then the program does not group, then StEP settings range 1-80, and After the instrument is stopped running (StoP), the StEP is automatically set to initial segment 1.	1~80 (Ex- factory Value 1)
PrG (PrG)	Curve group number (applicable only to 875)	Display the currently executing curve group number. When Prgd set curve grouping, you can program multiple curves to deal with different technology to be Seeking, by choosing this parameter to choose to perform the appropriate curve. The PrG setting range is limited by the PrGd parameter: When PrGd = 0, the program is not grouped, PrG can not be set, PrG is fixed at 0. When PrGd = 4, the program is forcibly divided into 4 groups of curves, PrG setting range is 1-4. When PrGd = 8, the program is forcibly divided into 8 groups of curves, PrG setting range is 1-8. When PrGd is forced to group, you can pre program a number of different groups of curves, Then by setting PrG you can quickly and easily choose to execute the appropriate curve. For example: PrGd = 4, PrG = 2, then the program is forced into four groups of curves, the current implementation of the second curve (ie, to implement the procedures in paragraphs 21-40), When the controller implement stop after, StEP is automatically set as the start of the 2nd curve (ie, 21 steps)	0~8 (Ex- factory Value 0)
random	Section setting time and already run time(applicabl e only to 875)	The PV display segment sets the time, and the SV displays the already running time. For example, if the current PV display 30.0/SV shows 10.0, it means that the current running segment setting time is 30.0 minute, and the already running time is 10.0 minute.	
Pl dn (Pidn)	PID parameter group number (applicable only to 875)	Displays the currently running PID parameter group number. This parameter is programmatically defined. 1: specifies the use of Group 1 PID parameters. 2: specify the use of Group 2 PID parameters. 3: specify the use of Group 3 PID parameters.	0~3 (Ex- factory Value 1)

	Custom field parameters	Most to 8 field parameters can be defined by FP1 ~ FP8 (The defined parameters will be transferred from the function parameters or control parameters to the field parameter)	
Lo[(LoC)	Password lock	Set the $L \Box [= 800$ and then press the $F/-$ key to enter the function parameters. Set the $L \Box [= 801$ and then press the $F/-$ key to enter the control parameters. If $L \Box [\neq 800$ or 801, press $F/-$ the key to return the basic display state.	0~9999 (Ex- factory Value 0)

9.2 Function parameter

In the field parameters, set Loc=800, Then press (F/-) key to enter the function parameters.

Code	Name	Description	Range
HI AL (HIAL)	High limit alarm	Alarm on when PV>HIAL Alarm off when PV <hial-ahys, When the value set to Max. will disable this function Alarm output action can be defined by parameter ALtd.</hial-ahys, 	-999~3 200 [-9990~ 3200]
LoAL	Low limit alarm	Alarm on when PV <loal; Alarm off when PV>LoAL+AHYS When the value set to Min. will disable this function</loal; 	(<i>HI HL</i> Ex-factory Value 3200) (<i>L_AL</i> Ex-factory
Harl	Deviation high alarm	Alarm on when PV-SV>HdAL; Alarm off when PV-SV <hdal-ahys When the value set to Max. will disable this function</hdal-ahys 	Value -999) (H႕RL Ex-factory Value 3200)
LJAL	Deviation low alarm	Alarm on when PV-SV <ldal; alarm="" off="" pv-<br="" when="">SV>LdAL+AHYS When the value set to Min. will disable this function HdAL and LdAL can also be used as high limit and low limit alarms when needed.(Refer to the description of parameter SSCo)</ldal;>	-999~ 3200 [-9990~ 3200] (Ex- factory Value - 999)
LLR	Control loop break off / shorted Alarm	When the instrument control output is equal to otL or otH, and the continuous time is greater than LBA setting time, And the PV measurement does not exceed 2 °C change, then determine the control loop failure, the output alarm. The time unit of LBA is second and the alarm port output is defined by ALtd.When LBA = 0, cancel the LBA Alarm function.	0~9999 sec (Ex- factory Value 0)
RLEd (Altd)	Alarm output definition	The number of bits of ALtd represents the output port, ones bits represents AL1, tens bits represents AL2, hundreds bits represents AUX, The value of each bit 0 ~ 9 represents the different alarm function selection, 0 represents no alarm output, 1, 2, 3, 4, 5, 6, 7, 8,9 respectively represents to HIAL,LOAL,HdAL,LdAL, HIAL+LOAL (Outside the area),HdAL+LdAL(Outside the area),HIAL+LOAL(within the area),HdAL+LdAL(within the area),LBA.	0~9999 (Ex- factory Value 1)

		ALtd = Image: Construct of the second se	
		For example: Altd = 961, which means that the HIAL upper limit alarm is output by AL1 port, HdAL and LdAL are output by AL2 port can realize outside the area deviation alarm, LBA is output by AU1 port,AU2 port no alarm output.	
ЯНУ5	Alarm hysteresis	Avoid frequent alarm on-off action because of the fluctuation of PV.	0~200.0 [0- 2000] (Ex- factory Value 2)
Rdon	Alarm ON delay	Alarm ON action delay, unit is seconds,When Adon=0, will no alarm ON delay function.	0~999 (Ex-
RdoF	Alarm OFF delay	Alarm OFF action delay, unit is seconds,When AdoF=0, will no alarm OFF delay function.	Value 0)
RdE (Adt)	Alarm delay definition	0: no alarm delay function. 1:AL1 alarm output has delay. 2:AL2 alarm output has delay. 3:AUX alarm output has delay. 5:AL1, AL2 alarm output has delay. 7:AL1, AL2, AUX alarm output has delay. 4 and 6:empty.	0~7 (Ex- factory Value 0)
<i>ALL</i>	Definition of alarm self lock	 When the alarm self-locking takes effect, the alarm output remains self - locking, no matter how the measured value changes. When the measured value does not conform to the alarm condition, the power supply is reopened, and the alarm will be lifted. 0: no alarm self locking function. 1:AL1 alarm has self lock. 2:AL2 alarm has self lock. 3:AUX alarm has self lock. 5:AL1, AL2 alarm has self lock. 7:AL1, AL2, AUXalarm has self lock. 4 and 6:empty. 	0~7 (Ex- factory Value 0)

RLE	Definition of First alarm exemptions	When F 0: No F 1: HIAL 2: LoAL 3: HdA 4: LdAI 5: HIAL 6: HdA 7: HIAL	 When Power start, if the happen first alarm will be exemption. 0: No First alarm exemptions function. 1: HIAL has First alarm exemptions. 2: LoAL has First alarm exemptions. 3: HdAL has First alarm exemptions. 4: LdAL has First alarm exemptions. 5: HIAL, LoAL has First alarm exemptions. 6: HdAL, LdAL has First alarm exemptions. 7: HIAL, LoAL, HdAL, LdAL has First alarm exemptions. 					
וחד)	Input specification	AiFUZZ choose	AiFUZZY-815/875 has a variety of input specifications to choose from and can be set freely, as follows:					
	Code	Int	Input spec	Int	Input spec	Tactory Value		
		0	K(-50.0~+1300°C)	18	J(0~300.00°C)	0)		
		1	S(-50~+1700°C)	20	Cu50			
		2	B(-50~+1700°C)	21	Pt100(-200.0~+600.0°C)			
		3	T(-200~+350°C)	_				
		4	F(0~800°C)	22	Pt100(-100~+300.00°C)			
		5		_				
		6	B(200~1800°C)	25	0~75mV			
		7	N(0~1300°C)	26	0~800			
		8	WRe3-WRe25	27	0~4000			
		9	WRe5-WRe26	28	0~20mV			
		10	Special custom input	29	0~100mV			
			specification	30	0~60mV			
		12	E2 radiation type	31	0~1V			
			pyromter	32	0.2~1V			
		15	Spare	33	1~5V(4~20mA)			
				34	0~5V(0~20mA)			
		16	Spare	35	-20~+20mV			
				36	-100~+100mV			
		17	K(0~300.00°C)	37	-5V~+5V			
dP	Display Resolution	Four fo Note 1: selecta thermo If Inp=	rmats (0/0.0/0.00/0.00 For thermocouples or able, and the internal re ocouple is used,dP is re 17,18 or 22,resolution v	00) are RTD inj esolutic ecomme vill supj	selectable. out, only 0 or 0.0 is on is 0.1. When S type ended to be 0. port display 0.0 or 0.00	(Ex- factory Value 0)		
InL	Signal scale Iow limit	Used to signal(lower li used as	o define the lower limit Display lower limit valu imit scale of the output s a transmission outpu	scale v ie); it is signal t(CntL=	ralue of the linear input also used to define the when the controller is Pvtr or Svtr) .	999~ 3200 [-9990~ 32000] (E~-		
I nH	Signal scale high limit	Used to signal(high lin used as	o define the high limit s Display high limit value nit scale of the output s s a transmission outpu	cale va e); it is a signal v t(CntL=	llue of the linear input also used to define the when the controller is Pvtr or Svtr) .	factory Value 300)		

SC	Input Shift Adjustment	Sc is used to shift input to compensate the error caused by transducer, input signal, or auto cold junction compensation of thermocouple. PV after compensation=PV before compensation + Sc It is generally set to 0. The incorrect setting will cause measurement inaccurate.	-199~ 400 [-1990~ 4000] (Ex- factory Value 0)
I nF	PV input filter	The value of InF will determine the ability of filtering noise. When a large value is set, the measurement input is stabilized but the response speed is slow. Generally, it can be set to 1 to 3. If great interference exists, then you can increase parameter "InF" gradually to make momentary fluctuation of measured value less than 2 to 5. When the instrument is being metrological verified, "InF" s can be set to 0 or 1 to shorten the response time.	0~40 (Ex- factory Value 0)
dU	Temperature unit	°C: Celsius. °F: Fahrenheit. Thermocouples and RTDs only	(Ex- factory Value ° C)
Rdr5 (AdrS)	Communicatio n address	If the instrument's COMM port is configured with the S-type RS485 or RS232C communication interface module, it can be connected with the computer to realize multi-computer connection. For computers without an RS485 interface, you can add an RS232C/RS485 converter or a USB/RS485 converter. The AdrS parameter is used to define the instrument communication address, the valid range is 0 ~ 80. The instruments on the same communication line should be set a different AdrS value to distinguish each other.	0~100 (Ex- factory Value 1)
6P5	Baud rate	bPS parameter defines the communication baud rate, which can be defined as the range of 1200 ~ 19200bit / s (1.2K~19.2K).	0~19.2K (Ex- factory Value 9600)
<i>PRFI</i> (PArL)	Communicatio n verification	nonE:No verification. odd:Odd number verification. EVEn : Even number verification.	(Ex- factory Value nonE)
Eoññ (COMM)	Communicatio n protocol	FBUS: instrument communication protocol for FTBUS. MBUS: instrument communication protocol for MODBUS.	(Ex- factory Value MBUS)
Eut (Evt)	Event input type	When I2 module was installed, the meter have following functions. nonE : Disable event input function. reSt : Run / Stop switching function. Connected in short time, start to running program, keep connect more than 2 sec, program switch to stop. SP1.2 : Switching between setpoint 1 and setpoint 2 when use 919 or PrSn=0 at 979. MIO in open status, SV=SP1, when MIO in close status, SV=SP2. Pid2 : Switching 1st PID and 2nd PID. When use as single	(Ex- factory Value oFF)

		direction control, MIO in open status, P, I, d and CP was active, when MIO in close status, P2, I2, d2 and CP2 was active.	
SSCo	Advanced System Code	SSCo is used to select advanced function. SSCo is used to select advanced function. The value of AF is calculated as below: AF=A×1+B×2+C×4+D×8+E×16+F×32+G×64+H×128 A=0, HIAL and LoAL work as high and low limit alarms; A=1, HIAL and LoAL will become to deviation high alarm and Deviation low alarm, and the instrument can have two groups of deviation high and low limit alarms. B=0, HdAL and LdAL work as deviation high and low limit alarms; B=1, HdAL and LdAL work as high and low limit alarms, and the instrument can have two groups of high and low limit alarms. C=0, Alarm and control hysteresis work as unilateral hysteresis; C=1, As bilateral hysteresis. D:Spare, can only be 0. E:Spare, can only be 0. F:Spare, can only be 0. H=0, Fine control mode, internal control resolution was demonstration's 10 times. When on linear input mode, biggest display value is 3200 units; H=1, Wide range display mode, This mode is selected when the linear input requires a maximum display value greater than 3200. For example, if HIAL is required to be the upper limit absolute value alarm, HdAL should also be the upper limit absolute value alarm, and the alarm return difference is a bilateral return difference. If there are no other options required, set: SSCo=0x1+1x2+1x4+0×8+0×16+0×32+0×64++0x128=6	0~255 (Ex- factory Value 0)
SPL	Low limit of SV	Minimum value that SV is allowed to be.	-999~3 200 [-9990~
SPH	Upper limit of SV	Maximum value that SV is allowed to be.	32000] (Ex- factory Value
5P I	Given point 1	For 815meter or 875 parameters PrSn=0 or 1, normally Given value SV=SP1.	999~32 00)
SP2	Given point 2	For 815 or 875 parameters PrSn=0 or 1, When I2 module installed in MIO position, SP1 and SP2 can be switched by an external switch. If the switch is off, SV=SP1; if the switch is on, SV=SP2.	-999~32 00 [-9990~ 32000] (Ex- factory Value 0)

Pont (Pont)	Program run mode after power restart (applicable only to 875)	Cont : Continue to run the program from the original break point. If STOP STATUS was activated before power cut, then it (the program) will keep stop status after power restart. StoP : Stop the program after power restart run1 : Start to run the program from starting segment unless the instrument was in "stop" state before power cut. dASt : If these have deviation alarm after power resume, then stop the program, otherwise, continue run the program from the original break point. HoLd : Go into HOLD state after power on. If it is in StoP state before power cut, then keep in StoP State after power on.	(Ex- factory Value run1)
<i>P</i> 5y5 (PSyS)	Program Running mode (applicable only to 875)	The PSYS parameter is used to select the program control function, which is calculated as follows: PSYS = A×1 + B×2 + C×4 + D×8 + E×16 + F×32 When A=0, Disenable ready (rdy) function; A=1, Enable ready (rdy) function. B=0, Ramp mode; B=1, Soak mode. C=0, Time unit in Minute, the range is 0.1~3200; C=1, Time unit in Hour, the range is 0.1~3200. D=0, Disable PV start up function; D=1, Enable PV start up function. E=0, When work as program generator, upper windows display PV;E=1, When work as program generator, upper windows display the current step. F = 0, the standard operating mode; F = 1, the program running RUN operation will enter the pause(HOLD) state.	(Ex- factory Value 0)
PrGd) (PrGd)	Program grouping definition (applicable only to 875)	 When PrGd=0, no grouping. When the PrGd=4 is divided into 4 curves, each group has 20 segments program, SP1-20 segment procedures for the 1 curve group, SP21-40 segment procedures for the 2 curve group, SP41-60 segment procedures for the 3 curve group, SP61-80 segment procedures for the 4 curve group. When the PrGd=8 is divided into 8 curves, each group has 10 segments program. SP1-10 segment procedures for the 1 curve group, SP1-20 segment procedures for the 2 curve group, SP1-20 segment procedures for the 2 curve group, SP1-30 segment procedures for the 2 curve group, SP31-40 segment procedures for the 4 curve group, SP41-50 segment procedures for the 5 curve group, SP51-60 segment procedures for the 7 curve group, SP51-60 segment procedures for the 8 curve group, SP51-80 segment procedures for the 8 curve group, 	0~8 (Ex- factory Value 0)
Pr5n (PrSn)	No. of Program step (applicable only to 875)	When Prgd=0, PrSn to define the number of program in use. PrSn= 0: disable the program running mode, then 875 will same as 815, meanwhile, can set the parameter "rAte" to limit the ramp time. Pno=1~80: 875 working as normal programmable controller. When Prgd=4 or 8, the PrSn is fixed to 80.	0~8 (Ex- factory Value 80)

Lo[2	Parameter Lock	Parame preven √: allo ×: not Run, St Functic	Parameter was protected by LoC2 (Parameter LOCK) to prevent setting error. The function was shown as below: / : allow to modify data or execute < : not allow to modify data or execute Run, Stop, Hold. and Program Time & Temp. Function just for 875 only				
		LOC	Field parameters	SV	Program Step Time & Temp	Shortcut keys for run, stop, or hold	
		oFF	√	√	√	√	
		LCK1	√	√	√	×	
		LCK2	√	×	×	√	
		LCK3	√	×	×	×	
		LCK4	×	√	√	√	
		LCK5	Х	√	√	×	
		LCK6	Х	×	×	×	
FP I FP8	Field parameter definition	You car control If there can be	n select 8 par parameters are no or les set to nonE.	rameter as field ss than {	rs in the functio d parameters. 3 field paramet	on parameters or ers, the FP* value	(Ex- factory Value nonE)

9.3 Control parameter

In the field parameters, set Loc=801, Then press the 😥 key to enter the control parameters.

Code	Name	Description	Range
EnEL (CntL)	Control mode	onoF: on-off control. For situation not requiring high precision. FPId: advanced artificial intelligence FUZZY+PID control(Recommended use). Pvtr: The controller is used as a measurement display or digital display transmitter. the SV will display the temperature unit. when the linear signal is input, the SV will not be displayed, and can directly use the PV value as the output value.when the OUT is installed with a 4-20 mA module, the meter can be used as a transmitter. Svtr: Directly use the SV value as the output value. When OUT installs the 4-20mA module, the meter can be used as the program given generator.	(Ex- factory Value FPId)
НУБ	Control Hysteresis	HYS is used for on-off control to avoid frequent on-off action of relay. For a reverse acting (heating) system, when PV > SV, output turns off; when PV <sv-hys, on.<br="" output="" turns="">For a direct acting (cooling) system, when PV<sv, output<br="">turns off; when PV>SV+HYS, output turns on.</sv,></sv-hys,>	0~200.0 [0- 2000] (Ex- factory Value 2)

orEu (orEv)	Acting method (Control direction)	onr: Reverse acting. Increase in measured variable causes a decrease in the output, such as heating control. ond: Direct acting. Increase in measured variable causes an increase in the output, such as refrigerating control.	(Ex- factory Value onr)
dE∃a (dEZo)	dead zone	dEZo is only suitable for heating-cooling two-way adjustment.The dead zone is set around the SV set point. When the set value is positive, it becomes a static zone (no action zone).When the set value is negative, it becomes an overshoot zone. The decimal point position is defined by the dP parameter.	-1999~ 9999 (Ex- factory Value 0)
5- un (Srun)	Running Status	Run: Runs the control state and allows the run or stop operation from the panel keys. StoP: Stops the state and allows the run or stop operation from the panel keys. HoLd: When the controller is 815 or 875 and the PrSn=0, this state is the same as the running state, but it is prohibited to perform the run or stop operation from the panel keys. When the controller is 919P and the parameter PrSn>0 program control, the meter keeps constant temperature controlling output in this state, but pauses the timing, and the second display SV flashes to display "HoLd", which can be run or stop by the panel keys operation to release the hold. Note: You cannot enter the HOLD state by using the panel keys operation. You can enter this state only by directly modifying this parameter.	(Ex- factory Value run)
<i>日</i> と (At)	Auto tuning	oFF: Auto tuning function was off. on: Start the PID parameter auto-tuning function, and the auto-tuning finish will automatically return to oFF. FoFF: Auto tuning function was off, and cannot activate again by pressing key from panel.	(Ex- factory Value oFF)
Р	Proportional band (No.1 PID parameter)	Proportional band in FPID control. Instead of percentage of the measurement range, the unit is the same as PV. Generally, optimal P, I, D and CP can obtained by auto tuning. They can also be manually inputted if you already know the correct values.	1~3200 [32000] (Ex- factory Value 25)
ł	Integral time (No.1 PID parameter)	Integration time in FPID control, the unit is second, and the integral action is canceled when I=0.	1~9999 sec (Ex- factory Value 200)
đ	Differential time (No.1 PID parameter)	Differential time in FPID control,the unit is 0.1 seconds, and the differential action is cancelled when d=0.	0~3200 sec (Ex- factory Value 50)

EP	Control cycle (No.1 PID parameter)	Small value can improve control accuracy. For SSR, thyristor or linear current output, it is generally 0.5 to 3 seconds(Ex-factory set value 2 sec). For Relay output or in a heating/cooling dual output control system, generally 15 to 40 seconds(Ex-factory set value 15 sec), because small value will cause the frequent on-off action of mechanical switch or frequent heating/cooling switch, and shorten its service life. It is recommended that CP be set to about 1/5-1/10 of differential time (basically equal to the lag time of the system). When the parameter OUt or Aut = rELy, CP will be limited to more than 3 seconds. Auto tuning will automatically set CP to suitable value considering both control precision and mechanical switch longevity. When the parameter CntL = onoF, CP will used as timer to make delay time to avoid the power restart in short period. It suit for compressor protection. If the output for the control valve, recommended CP=3~15 seconds, taking into account the response speed and avoid the valveFrequent action.	0.2~ 300.0 (Ex- factory value 2, OUT for relay, electrical output, when the factory value is: 15)
P2	Proportional band 2 (No.2 PID parameter)	When the instrument uses the heating / cooling dual output adjustment, it is used as a cold output proportional band. When 979 can be used as the second group of PID proportional band.	1~3200 [32000] (Ex- factory Value 25)
12	Integral Time 2 (No.2 PID parameter)	When the instrument uses the heating / cooling dual output adjustment, it is used as a cold output time of integral. When 979 can be used as the second group of PID time of integral.	1~9999 sec (Ex- factory Value 200)
d2	Differential time 2 (No.2 PID parameter)	When the instrument uses the heating / cooling dual output adjustment, it is used as a cold output time of differential. When 979 can be used as the second group of PID time of differential.	0~3200 (Ex- factory Value 50)
CP2	Control cycle 2 (No.2 PID parameter)	When the instrument uses the heating / cooling dual output adjustment, it is used as a cold output control period. When 979 can be used as the second group of PID control period.	0.2~ 300.0 (Ex- factory Value 2)
ΡЭ	Proportional band 3 (No.3 PID parameter)	Applicable only to 979	1~3200 [32000] (Ex- factory Value 25)

13	Integral time 3 (No.3 PID parameter)	Applicable only to 875	1~9999 sec (Ex- factory Value 200)
d 3	Differential time 3 (No.3 PID parameter)	Applicable only to 875	0~3200 sec (Ex- factory Value 50)
СРЭ	Control cycle 3 (No.3 PID parameter)	Applicable only to 875	0.2~ 300.0 (Ex- factory Value 2)
oUE (oUt)	OUT main output type	Ssr: SSr drive voltage output or TRIAC no contact normally output or thyristor zero crossing trigger signal. rELy: Relay contact output 0-20: 0~20mA linear current output(Also suitable for 0-5V or 0-10V output). 4-20: 4~20mA linear current output(Also suitable for 1-5V or 2-10V output). PHA: Single-phase phase-shift output. PHA is only for 50Hz power supply, and don't support bidirectional control system. NFEd: no feedback signal position proportional output, direct control valve motor positive / reverse, Valve travel time defined by Vrtt parameters. Fed: position feedback signal output, the valve travel time should be more than 10 seconds, Feedback signal input from the 0~5V/1~5V input.Note: The External input SV set value function can no longer be used in this output mode. FEAt: auto-tuning valve position, the instrument will first close the valve will be feedback signal recorded in the rSPL parameters, and then fully open the valve memory valve feedback signal in the rSPH parameters, after completion Automatically returns the FEd control mode.	(Ex- factory value according to purchase, model set)
RUE (Aut)	AUX auxiliary output type (as a refrigeration output)	Ssr: SSr drive voltage output. rELy: Relay contact output. 0-20: 0~20mA linear current output(Also suitable for 0-5V or 0-10V output). 4-20: 4~20mA linear current output(Also suitable for 1-5V or 2-10V output).	(Ex- factory value according to purchase, model set)
oEL (otL)	Output low limit	$0 \sim 100\%$: otL is the minimum output of OUT in single directional control system. $-1 \sim -110\%$: The instrument works for a bidirectional system, and has heating/refrigerating dual output. OUT (main output) works for heating, and AUX (Auxiliary output) works for refrigerating. In a bidirectional system, otL for define the limitation of maximum cooling output. So, when the otL = -100\%, means no limitation on cooling output. If set otL = -110\%, it can made current output excess 10% on maximum output.	-110~ +110% (Ex- factory Value 0)

		When the output type is SSR output or relay output, maximum of cooling output should not set more than 100%	
<i>∟ЕН</i> (otH)	Output upper limit	imit the maximum output value of the main output oUt, the setting range is $0 \sim 110\%$. When SSR or relay output, the maximum output limit should not be greater than 100%. 110% can make the current output such as $(4 \sim 20mA)$ the maximum range exceeds 100%. Suitable for special occasions. When the measured value PV is less than otEr, otH limits the maximum output value of the main output(oUt), and when PV is greater than otEr, the system correction output upper limit is 100%; In the non-feedback position proportional output (when oUt = nFEd), if otH is less than 100, the Controller Auto Tuning the valve position at power-on. If otH = 100, the Controller Auto Tuning the valve position the power on time. otH setting must be greater than otL.	0~110% (Ex- factory Value 100)
oŁĘr (otEr)	Work range of OPH	otEr can implement the segmentation output power limit. When PV <oter, is="" limit="" of="" oph;="" outp="" pv="" the="" upper="" when="">otEr, the upper limit of OUTP is 100%. For example, to avoid that the temperature raises too quickly, under 150°C, a heater can work only under 30% of output power, then we can set otEr=150.0 (°C), OtH=30 (%),then, when the temperature is lower than 150 °C, the upper limit of the output power is 30%, 150°C or more, and the upper limit of the output power is 100%.</oter,>	0- 3200°C /mi- 999~ 3200°C or Linear unitn (Ex- factory Value 3200)
<i>⊢ ¶ E E</i> (rAtE)	Heating rate limit	If rAtE is set to valid, when the program starts, if PV < SV, the temperature will first rise to the first set value according to the heating rate limit defined by rAtE. In the temperature increase rate limit state, "PV" character flashes. For slope mode, rAtE is only valid for the first paragraph program, while in platform mode, rAtE is valid for any paragraph program.	0- 3200°C /min (Ex- factory Value 0)

Additional Remarks of Special Functions

10.1 Position proportional output

AiFUZZY-815/875 can directly drive the motor to control the valve, and supports two modes: valve position feedback signal and valve position feedback signal.When no feedback position ratio is output (oUt=nFEd), If otH is less than 100, the instrument will auto tuning the valve position when power on, that is, automatically close the valve when power on, and the time is valve stroke time. Meanwhile, the otH parameter can limit the maximum valve opening under the condition that the measured value PV is less than the parameter otEr. If the otH = 100 is set, the instrument will auto tuning the valve position when the output is 0% and 100%, and will not auto tuning the valve position when power on to shorten the start-up time.

When the proportional output of the feedback position is set to oUt = FEAt, the instrument automatically closes the valve first, then opens the valve completely, and then measures the feedback signal to set the valve position and save it. After the valve position is auto tuning, the instrument automatically sets the parameter oUt to FEd for normal control. If the feedback signal exceeds 2% of the measurement range, The instrument will decided there the feedback signal is abnormal and automatically control it in a valveless feedback mode, and display "FErr" in the lower display window to indicate an error. The feedback signal can be 1K resistor (Need to be equipped with U5 module) or $0 \sim 5V/1 \sim 5V$ signal (Parallel 250 resistance can be converted to $0 \sim 20$ mA/4 ~ 20 mA).

Position proportional output (valve feedback signal is 1K resistor) wiring diagram of direct drive valve:



When the valve position feedback signal is a potentiometer, install a non-isolated 5V power distribution output module V5 to convert the resistance signal into a voltage signal (as the picture shows).

When the valve position feedback signal is 0-5V or 1-5V (the current signal needs to be converted into voltage by the resistor), the direct 7(+) and 8(-) terminals can be used.

10.2 Manual auto-tuning (only for valve position control and where automatic autotuning is not allowed)

In the system difficult to control or in the applications in which some executive bodies such as control valve is used and therefore outputs are not allowed to be greatly changed, traditional auto tuning is not suitable. AiFUZZY-815/875 instruments have manual auto tuning mode. To do this, switch the instrument to manual mode. After manual control is basically stable, start up auto tuning at manual mode, and the output will be restricted in the range between +10% and -10% of the current manual output. This function can avoid great change of valve and improve the precise of auto-tuning.

Note: before manual auto-tuning, the manual output value should be limited in the range of 10% - 90%, otherwise optimal parameters can be obtained.

10.3 Single-phase phase-shift trigger output (Power regulation output)

When OUt is set to PHA, installing a K5 or K6 module in OUT slot can single-phase phase-shift trigger a TRIAC or 2 inverse parallel SCRs. It can continuously adjust heating power by control the conduction angle of thyristor. With non-linear power adjustment according to the characters of sine wave, it can get ideal control. The trigger adopts self-synchronizing technology, so it can also work even when the power supplies of the instrument and the heater are different. Phase-shift trigger has high interference to the electric power, so user should pay attention to the anti-interference ability of other machines in the system. Now the K5 or K6 module can be only used in 50Hz power supply.

10.4 dead zone

When set to otL is negative (-1-110%), the instrument becomes a bidirectional adjustment system, with heating-cooling bidirectional adjustment output function, with two independent PID adjustment function, the main output oUt for heating, auxiliary output AUX for cooling.

dEZo is suitable for heating-cooling two-way adjustment system. The dead zone is set around the SV set point.

When the set value is positive, it becomes a static zone (no action zone). When the set value is negative, it becomes an overshoot zone.

As shown in the figure:



10.5 Temperature re-transmitter / Program generator / Manual current output

Besides FUZZY+PID ,and on-off control, if the output is defined as current output, the instrument can also retransmit PV (process value) or SV (setpoint) into linear current and output from OUTport . The precision of current output is 0.2%FS. Base on that ability,AiFUZZY-815 can become temperature re-transmitter and AiFUZZY-875 can become program generator

The corresponding parameters are set as below:

When CntL=Pvtr, PV is retransmitted to linear current, the instrument works as temperature retransmitter.

When CntL=Svtr, SV is transmitted and outputted, and the instrument works as manual current output controller(AiFUZZY-815) or prodram generator(AiFUZZY-875).

Out is used to choose output type, generally 4~20mA or 0~20mA output.

Parameter Int, InL, InH, and Sc are used for selecting input specification, setting low limit or high limit of PV and adjusting input.

For example, in order to retransmit temperature read from K thermocouple, range $0\sim400^{\circ}$ C, to current $4\sim20$ mA, the parameters are set as below: Int=0, InL=0.0, InH=400.0, OUt= $4\sim20$, and X linear current module is installed in OUT slot. When the temperature is less than or equal to 0° C, the output is 4mA. When the temperature equals to 400° C, the output is 20mA.

10.6 External signal remote control SV set value

When an external signal is allowed to remote control SV set value (see the SSCo parameter description), the meter can input a 1-5V voltage signal from the 5V terminal of its terminal to indicate the SV value. The scale of the external signal can be determined by the In-L/In-H or rSPL/rSPH parameters. If the voltage signal of the external signal is less than 1V, the external signal is automatically canceled to set the SV value, and the internal set the SV value is used instead. When using the external signal remote control SV set value function, the meter measurement input cannot be used with 1-5V/0-5V, which has no effect on thermocouple, RTD and mV voltage input. If the measurement input is 0-10 mA or 4-20 mA, the main input of the meter can be set to 0-1V or 0.2V-1V, then external 100 ohm or 50 ohm resistor. The external signal remote control SV set value function can the instrument to form a ratio or cascade adjustment system to perform complex adjustment functions.

10.7 Alarm delay diagram

Schematic diagram of alarm delay output:



The alarm ON delay also takes effect when the power is turned on. When the interval of the alarm ON is the ON delay setting, the alarm output will not turn ON. Similarly, when the alarm OFF interval is below the OFF delay setting, the alarm output will not be turned OFF.

During the ON delay, when the alarm is turned ON \rightarrow OFF \rightarrow ON, the measurement is restarted from the time when the alarm is last turned ON. Similarly, during the OFF delay, when the alarm is turned OFF \rightarrow ON \rightarrow OFF, the measurement is restarted from the time when the alarm is finally turned OFF.

10.8 Alarm self-locking

If the alarm latch function is set to be effective, when the alarm output is ON, it hold in the ON state regardless of the temperature change.

Alarm unlock method: Release by power OFF (After the controller is powered back on, if the measured value does not meet the current alarm condition, the alarm will be OFF).

This function is usually used as an over-temperature protection function. It can be used to realize the function of forcibly turning off the main power when over-temperature occurs, until the operator releases the fault.

10.9 First alarm exemptions

Sometimes the fault alarm may occur at the beginning of power on. In a heating system, at the beginning of power on, its temperature is much lower than the set point. If low limit and deviation low limit are set and the alarm conditions are satisfied, the instrument should alarm, but there is no problem in the system. Contrarily, in an refrigerating system, the unnecessary high limit or deviation high limit alarm may occur at the beginning of power on. Therefore,

Ft34** instruments offer the function of alarm blocking at the beginning of power on. When ALE is set to 1~7, the corresponding low or high alarms are blocked until the alarm condition first clears. If the alarm condition is satisfied again, the alarm will work.

10.10 LBA Control loop break off / shorted Alarm

When the control output becomes otH or otL,At each interval LBA set time as a unit to monitor of changes in the PV value,According to the amount of change to determine whether there is any abnormal control circuit. The time unit of LBA is second and by AL1 alarm.

The following conditions for the alarm status:

① When orEV is onr Reverse action: When the control output of the instrument continues to be otH, the increase of the measured value (PV) within the setting time of LBA is less than the change of LBA judgment (2°C).

When orEV is ond is positive: When the instrument control output continues to otH, the measured value (PV) decreases less than LBA judgment range (2°C) within the setting time of LBA.

② orEV is onr Inverse operation: When the instrument control output continues for otL, the measured value (PV) decreases less than the LBA judgment range (2°C) within the setting time of LBA.

When orEV is ond is in positive operation: When the instrument control output continues to otL, the measured value (PV) rises less than LBA judgment range (2°C) within the setting time of LBA.

10.11 Fine Control

Fine control means that the resolution of PID operation is 10 times higher than the display resolution. For example, the temperature signal of the instrument is displayed as 1 °C, but the internal PID is still calculated and controlled according to the resolution of 0.1 °C, which can achieve much higher control precision than the display resolution.

In previous versions of the FT series, only the temperature signal was in fine control mode, when the new version is linear input, as long as the displayed value range is less than 3000 words (most applications in industrial applications do not exceed 3000 words), using

default fine mode control to obtain higher control precision and more stable output, and when it is necessary to display a value range greater than 3000, SSCo.H=1 can be set.

10.12 Communication function

If the COMM port of the meter is configured with an S type RS485 communication interface module. It can realizes multi-machine connection with the computer, and can realize various operations and functions of the instrument through the computer.For computers without RS485 interface, an RS232C/RS485 converter or USB/RS485 converter can be added. Every communication port of a computer can connect up to 60 AiFUZZY-800 instruments, or 80 AiFUZZY-800 instruments if a repeater is installed. A computer with 2 communication ports can connect up to 160 instruments. Please note that every instrument connecting to the same communication line should be set to a unique communication address. If the number of instrument are enough, 2 or more computers can be used and a local network can be set up.

The instrument adopts the international MODBUS-RTU communication protocol and the Independence open FTBUS communication protocol. There are a variety of configuration software to support AiFUZZY-800 instrument communication.



10.13 Partial application wiring method 10.13.1 The wiring method of the input signal











Note 1: According to the voltage and current of load, choose suitable varistor to protect the thyristor.Capacitor resistor absorber is needed for inductance load or phase-shift trigger output. Note 2: SCR power module is recommended. A power module includes two SCRs, is similar to

the above dashed square.

Note 3: Phase-shift trigger module K5 only supports 200~240VAC power, and K6 supports 340~415VAC.

Input fault indication

When the display window PV alternately displays the "orAL" character, it indicates that the input of the measurement signal is abnormal or out of range; please check whether the Int parameter setting is consistent with the input sensor signal type. If it is determined to be consistent, please check if there is any problem with the sensor or wiring.

Further explanation of AiFUZZY-875 program control

12. Further explanation for the operation of AiFUZZY-875 series instrument

AiFUZZY-815 program type temperature controller is used in the application where the setpoint should be changed automatically with the time. It provides 80 segments program control which can be set in any slope and the function of jump, run, hold and stop can also be set in the program. Measurement startup function, preparation function and power-cut/power-resume event handling modes also provided.

12.1 Function and Concept

StEP:

The No. of the program Step can be defined from 1 to 80, and the current Step is the program Step being executing.

StEP time:

The total time set for the program segment to run, in minutes or hours, with valid values ranging from 1 to 999.9.

Running time:

The Time of current Step has run. As the running time reaches the Step time, the program will jump to the next Step automatically.

Jump:

The program can jump to any other steps in the range of 1 to 80 automatically as you programmed in the program Step, and realize cycle control.

Run/Hold:

When program is in the running status, timer works, and set point value changes according to the preset curve. When program is in the holding status, timer stops, and set point remains to make temperature hold also. The holding operation can be programmed into the program step.

Stop:

When the stop operation is activated, the program will stop, running time will be clear, event output switch will reset and the output control will stop output. If run operation is activated when instrument is in the stop status, the program will start-up and run again from the set step no. The stop function can be programmed into the program Step. The stop operation can also be performed manually at any time. (After stop operation is done, the step no. will be set to initial segment, but user can modify it again). If the program ran the last step of "PrSn", program will stop automatically.

Power cut/resume event handling:

There are 5 events handling method selectable for power resume after power cut off. Please refer to parameter Pont .

PV startup and PV preparation function (rdy function) :

At the beginning of starting a program, resuming a program after power cut or continuing to run a program after it is just modified, the PV (process value) are often quite different from the set point. PV startup function and PV preparation function can make PV and set point consistent, and avoid unexpected result. When PV startup function enabled, the instrument will adjust the running time automatically to make the expected set point is the same as the current PV.

For example, the program is set that the temperature will be raised from 25℃ to 625℃ in 600 minutes. But the current PV is 100℃, then the instrument will automatically to run this program start from 75 minutes, that mean changed the temperature raised from 100℃ to 625℃ in 525 minutes (600-75) min.

At the above situation (PV=100, SV=25, first step SV), when PV preparation function is enable, the alarm function will be blocked at that time, and PV will be adjusted to approach SV until the deviation alarm condition is released (PV is between SV-LdAL and SV+HdAL). After deviation alarm was off, the controller starts to run the program again. Preparation function (rdy Function) is helpful to keep the integrity of the program, but it will prolong the program time because the start of the program is

postponed.PV startup function is prior to PV preparation function. If both function are enabled, the system apply PV startup first, if PV startup function works, PV preparation function will not be activated.

Curve fitting:

Curve fitting is adopted as a kind of control technology for AiFUZZY-815 series instrument. As controlled process often has lag time in system response, by the way of curve fitting the instrument will smooth the turning point of the linear heating-up, cooling-down and constant temperature curves automatically. The degree of the smooth is relevant with the system's lag time t (t=d+CP); the longer of the lag time, the curve will more smooth. On the opposite the smooth function will be weaker. Generally the shorter of the process lag time (such as temperature inertia), the better of the program control on effect. By the way of the curve fitting to deal with the program curves, will avoid overshoot. Note: The characteristic of the curve fitting will force the program control to generate fixed negative deviation during the linear heating-up and fixed positive deviation during the linear cooling-down, the deviation is direct proportional to the lag time and the speed of heating-up (cooling-down). This phenomenon is normal.

12.2 Programming and operation (For AiFUZZY-875 only) 12.2.1 Ramp Mode(PSYS : B=0)

Programming of instrument has uniform format of temperature-time-temperature, which means temperature "A" (SP1), passed Time "A" (t01), then reached Temperature "B" (SP2). The unit of temperature set is °C and the unit of time set is minute. The following example includes 5 steps, which is linear temperature heating up, constant temperature, linear temperature cooling down, jump cycling, ready, Hold.

For example:

StEP1: SP1= 100, t-1=-0.1; adopts No.1 PID parameters to control;

StEP2: SP2=100, t-2=30.0 Start linear temperature heating up from 100°C, and the time needed 30 minutes to reach SP2(400 degree).

StEP3: SP3=400, t-3=60.0 Temperature raised to 400°C, slope of raising curve is 10°C/minute, The program take 60 minutes to raise temperature to SP3 (400 degree). It means keep the same temperature in 60 minutes.

StEP4: SP4=400, t-4=120.0 This is the step for temperature cooling down, slope of cooling curve is 2°C/minute, and the time needed is 120 minutes to reach SP4 (160 degree).

StEP5: SP5=160, t-5=0.0 When temperature reached 160°C, the program get in Hold state. If need go to next step, it needed operator to executed the "run" for next step.

StEP6: SP6=160 , t-6=-1.0 Jump to StEP1 to start from beginning.

In this example, it is assumed that the deviation high alarm is set to 5°C. Because the temperature of StEP5 is 160°C, and the temperature of StEP1 is 100°C, when program jumps from StEP5 to StEP1, the program will change to preparation state at first (if preparation mode "rdy" was enabled), i.e., Control the temperature until the deviation between setpoint and PV is less than deviation high alarm value. After temperature is controlled to 105°C, the program will be started from StEP1, and run the above steps again. The temperature control drawing was shown below.



The advantage of using the temperature-time programming method is that the slope of the temperature rise and temperature drop is set to a very wide range. The heating and constant temperature sections have a uniform setting format for easy learning. The setting curve is more flexible, and it can be set to continuously set the temperature rising section (for example, using a warming section with different slopes to approximate the function temperature), or a continuous constant temperature section.

12.2.2 Platform Mode(PSYS: B=1)

Suitable for the process which does not need to establish the temperature slope, can simplify the programming and more effective. Each step also can set parameter "rAte" to define temperature raise slope, if "rAte=0" raising speed will set to maximum. Because cannot know the actual time which spend on temperature raising, user can enable "rdy" function to ensure the correct soak time.

12.2.3 Set the given value and time of the program

Each program includes a given value and time, the given value indicates the temperature value to be controlled, time in besides regard as running time, there are special control functions, when t is positive the value represents the running time, when t is negative value represents a jump + command, The meaning is as follows:

The scope of t:-122.0~3200

t-XX=0.1 ~ 3200 represents the run time value t-XX=0.0 ~ -0.1 ~ -122.0 represents a jump + command

t's command:

0.0, represents that the controller enters the hold running state (HoLd) in this stage, and the program is suspended here and stops the timing.

-121.0, the program executes the StOP operation and enters a stop state.

-XXX.1, represents that first group of PID parameters are specified.

-XXX.2, represents that second group of PID parameters are specified.

-XXX.3, represents that third group of PID parameters are specified.

-XXX.4, represents the AL1 action.

-XXX.5, represents the release of AL1.

-XXX.6, represents the action of AL1 and AL2.

-XXX.7, represents the release of AL1 and AL2.

-XXX.8, indicating that AL1 outputs a 0.5 second pulse action, and the program continues to execute the next segment. However, if the alarm 1 has been activated, whether it is caused by the event output or not, the pulse action is canceled and the alarm 1 state remains unchanged.

For example, if t-1 = -0.1 is set, the first group of PID parameters will be executed and the PIDn parameter will be set to 1 automatically when running to the first-stage program.

For another example, setting t-7 = -11.2 means that when running reaches the program in the 7th stage, it will jump to the 11th stage to execute and specify the second group of PID parameters, and the PIDn parameter will be set to 2 automatically.

For example: Set t-5 = -1.4, which means that when running to the fifth-stage program, AL1 action and jumps to the first-stage running.

Note: In addition to the implementation of the operation or switch on the power to meet the jump segment can continue to jump to run in the program run to allow up to 2 consecutive jumps, continuous 3 or more jumps the program automatically suspended execution (That is, the instrument automatically inserts a suspend operation for three consecutive jumps), an external running operation is required to release the suspended state. Note that if the jump segment is itself (for example, t-6 = -6), the pause state will not be able to be released because such a segment is meaningless.

12.2.4 Multi-group PID application case

SP1 = any value, t1 = -0.1, the next paragraph, specify the first group of PID parameters (PIDn parameters automatically 1);

SP2 = 100, t2 = 30.0 at 100°C, the linear temperature was raised to SP3, the temperature rising time was 30 minutes and the temperature rising rate was 10° C/ minute;

SP3 = 400, t3 = 60.0, Reach 400°C and keep warm for 60 minutes;

SP4 = 400, t4 = -0.2, the next paragraph, specify the second group of PID parameters (PIDn parameters automatically 2);

SP5 = 400, t5 = 80, heated to 800°C at 400°C for 80 minutes and heated at a rate of 5°C/ min; SP6=800, t6=-0.8, Reach 800°C, AL1 outputs a 0.5 second pulse action and continues to execute the next segment; SP6=800 , t6=-0.8 , Reach 800°C, AL1 outputs a 0.5 second pulse action and continues to execute the next segment;

SP7 = 800, t7 = 120.0, In 800°C and keep warm for 120 minutes;

SP8 = 800, t8 = -0.3, continue to the next paragraph, specify the third group of PID parameters (PIDn parameters automatically 3);

SP9 = 800, t9 = 60.0, heated to 1220° C at 800°C for 60 minutes and heated at a rate of 7°C/min; SP10 = 1220, t10 = 60, Reach 1220°C and keep warm for 60 minutes;

SP11 = 1220, t11 = -121.0, The instrument performs STOP operation, the instrument stops control output, and the program stops running. If it is necessary to re-run the program, press the \bigcirc key for 2 seconds to make the meter execute RUN and start from the head loop.

12.2.5 Auto-tuning program setting method

For example: auto-tuning the first group PID, auto-tuning target value 400°C.

SP1 = any value, t1 = -0.1, the next paragraph, specify the first group of PID parameter groups (if you specify the second group PID parameter group, set t1 = -0.2, if you specify the third group PID parameter group, then set t1=-0.3);

SP2 = 400, t2 = 100.0 (t2 is any positive number value), and the auto-tuning target value is 400 °C. SP3 = 400, t3 = -1.0, jump to the first paragraph, so that the program is kept at a constant temperature of 400° C.

After setting the auto-tuning program, set At=on to enable the auto-tuning function.

14.Dimensions and installation instructions(mm)





• A-types panel



• E-types panel



• F-types panel

